



TO718AEU4B

EN User Manual

Tumble Dryer

2

Enjoy peace of mind. Register your appliance today.

Stay updated on better living services,
safety notices and shop for accesories.

1. Open the camera app on your smartphone and point at the QR code to scan.

The product registration
QR code is located
inside the door rim.



2. Tap the notification or link to open the registration form.
3. Complete your details and enjoy peace of mind.



Full version of the User Manual is
available on www.aeg.com.
Alternative, scan QR code, tap
aeg logo, and search for your
appliance.

Welcome to AEG! Thank you for choosing our appliance.



In our drive to be sustainable, we are reducing paper assets and provide full user manuals online. Access your full user manual at **aeg.com/manuals**



Get usage advice, brochures, troubleshooting, service and repair information at **aeg.com/support**



Buy accessories, consumables, and original spare parts for your appliance at **aeg.com/shop**

Subject to change without notice.

CONTENT

1.  SAFETY INFORMATION	3
2. SAFETY INSTRUCTIONS	7
3. PRODUCT DESCRIPTION	9
4. INSTALLATION	10
5. CONTROL PANEL	15
6. PROGRAMMES	17
7. OPTIONS AND SETTINGS	19
8. DAILY USE	22
9. HINTS AND TIPS CARE	23
10. CARE AND CLEANING	24
11. TROUBLESHOOTING	27
12. TECHNICAL DATA	29
13. CONSUMPTION VALUES	30
14. ENVIRONMENT CONCERNS	31

1. ⚠ SAFETY INFORMATION

Before beginning the installation and use of this appliance, carefully read the supplied instructions.

The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage.

Always keep the instructions in a safe and accessible location for future reference, and download the full version available online.



Read the instructions.



WARNING: Risk of fire / Flammable materials.

The appliance contains flammable gas, propane (R290), a gas with a high level of environmental compatibility.

Keep fire and ignition sources away from the appliance. Be careful not to cause damage to the refrigerant circuit containing propane.

1.1 Children and vulnerable people safety



WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be

kept away from the appliance unless continuously supervised.

- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.
- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- This appliance is for drying domestic-type, machine-dryable laundry only.
- Do not use the dryer function if laundry has been soiled with industrial chemicals.
- This appliance is designed for single household domestic use in an indoor environment.

- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- Do not change the specification of this appliance.
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used only with the appliance specified in the instructions supplied with the accessory. Read it carefully before installation (refer to the kit's user manual).
- The appliance can be installed as freestanding or below a kitchen counter with correct space (refer to the installation leaflet).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, that would prevent the appliance door from being fully open.
- Ensure air circulation between appliance and the floor. The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Connect the mains plug to the mains socket only at the end of the installation process. Make sure that the mains plug is accessible after installation.
- **WARNING:** Do not install the appliance in an environment with no air exchange. The appliance contains flammable gas, propane (R290), a gas with a high level of environmental compatibility. Keep fire and ignition sources away from the appliance. Be careful not to cause damage to the refrigerant circuit containing propane.

- **WARNING:** In the appliance enclosure or in the built-in structure, keep ventilation opening clear of obstruction.
- **WARNING:** Do not damage the refrigerant circuit.
- **WARNING:** Do not touch the accessible condenser metal fins with bare hands. Risk of injury. Wear protective gloves.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Do not exceed the maximum load of 8 kg.
- Wipe away lint or packaging debris that has accumulated around the appliance.
- Do not run the appliance without the filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Make sure that laundry is not trapped between the appliance door and the rubber seal.
- Fabric softeners, or similar products, should only be used as specified by the product manufacturer's instructions.
- Remove all objects from items that could be a source of fire ignition such as lighters or matches.
- **WARNING:** Never stop a tumble dryer before the end

of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.

2. SAFETY INSTRUCTIONS

2.1 Installation

- Warning: Risk of fire / Flammable materials.
- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Do not install the appliance in an environment with no air exchange. The appliance contains flammable gas, propane (R290), a gas with a high level of environmental compatibility. Keep fire and ignition sources away from the appliance. Be careful not to cause damage to the refrigerant circuit containing propane.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use the appliance where the temperature can be lower than 5°C or higher than 35°C.
- The floor area on which the appliance is to be installed must be flat, stable, heat resistant and clean.
- Always keep the appliance vertical when it is being moved.
- When the appliance is in its permanent position, check if it is levelled correctly with the aid of a spirit level. If it is not, adjust the feet accordingly.

2.2 Electrical connection



WARNING!

Risk of fire and electric shock.

- Connect the mains plug to the mains socket only at the end of the installation.

Make sure that there is access to the mains plug after the installation.

- **WARNING:** This appliance is designed to be installed / connected to a grounding connection in the building.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.
- This appliance is for household (indoors) use only.
- Do not dry damaged (torn, frayed) items that contain padding or fillings.
- If laundry has been washed with a stain remover, carry out an additional rinse cycle before starting a drying cycle.
- Dry only fabrics that are suitable to dry in the appliance. Follow the cleaning instruction on the item label.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door of the appliance.
- Do not dry dripping wet clothes in the appliance.

2.3 Use

WARNING!

Risk of injury, electric shock, fire, burns or damage to the appliance.

- This appliance is for household (indoors) use only.
- Do not dry damaged (torn, frayed) items that contain padding or fillings.
- If laundry has been washed with a stain remover, carry out an additional rinse cycle before starting a drying cycle.
- Dry only fabrics that are suitable to dry in the appliance. Follow the cleaning instruction on the item label.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.
- Do not sit or stand on the open door of the appliance.
- Do not dry dripping wet clothes in the appliance.

2.4 Care and cleaning

WARNING!

Risk of injury or damage to the appliance.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Be careful when you clean the appliance to prevent damage to the cooling system.
- When cleaning filters, dispose of lint in the garbage bin to prevent microplastics from entering the water system.

2.5 Compressor

WARNING!

Risk of damage to the appliance.

- The compressor and its system in the tumble dryer is filled with a special agent which is free from fluoro-chloro-hydrocarbons. This system must stay tight. The damage of the system can cause a leakage.

2.6 Service

- To repair the appliance contact the Authorised Service Centre. Use original spare parts only.
- Please note that self-repair or nonprofessional repair can have safety consequences and might void the guarantee.
- The following spare parts are available for at least 10 years after the model has been discontinued: gaskets and seals, switches and knobs, condensate pump, door locks, motors and motor brushes, transmissions between motor and drum, fan and fan wheels, drums and bearings, water piping and related equipment including hoses, valves and filters, cables and plugs, printed circuit boards, electronic displays, thermostats and temperature sensors, software updates (including reset software), springs, heaters and heating elements, electric fuses (separately or bundled together), tension pulley, support roller, doors, door seals, door handles, door lock assemblies and hinges, lint filters, air filters, plastic peripherals, condensate tank. The duration may be longer in your country. For further information, please visit our website.
- Please note that some of these spare parts are only available to professional repairers, and that not all spare parts are relevant for all models.
- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

2.7 Disposal




WARNING!

Risk of injury or suffocation.

- Warning: Risk of fire / Risk of material damage and damage to the appliance.
 - Disconnect the appliance from the mains electrical and water supplies.
 - Cut off the mains electrical cable close to the appliance and dispose of it.
- The appliance contains flammable gas (R290). Contact your municipal authority for information on how to discard the appliance correctly.
 - Remove the door catch to prevent children or pets from becoming trapped in the drum.
 - Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).





3. PRODUCT DESCRIPTION

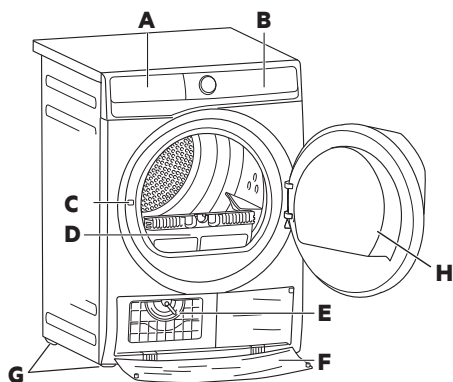


- A Water Container
- B Control Panel
- C Door Lock
- D Filter
- E Heat Exchanger lid
- F Heat Exchanger cover
- G Adjustable Feet
- H Appliance Door

4. INSTALLATION



Unpacking

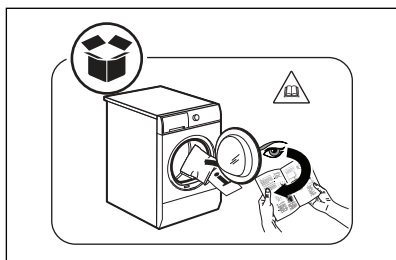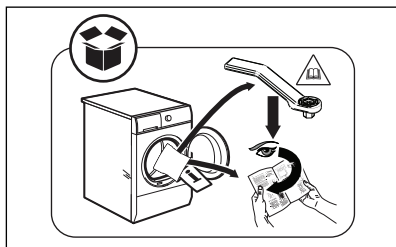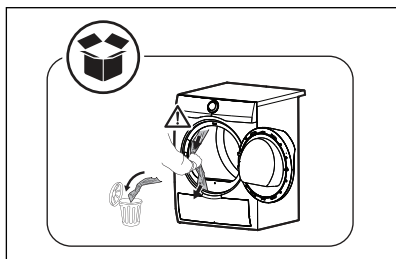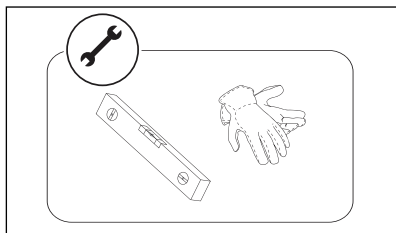




i Unlock Rear Drum Locks before using the machine to prevent noise during operation. Check your model to determine the correct unlocking method and follow the instructions shown below.

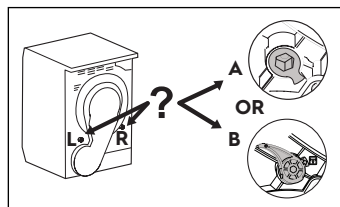

Option A : Tool Unlock

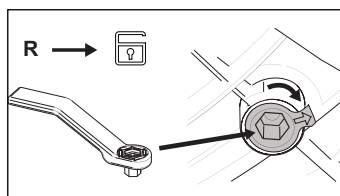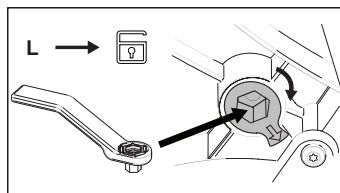

Option B : Hand Unlock

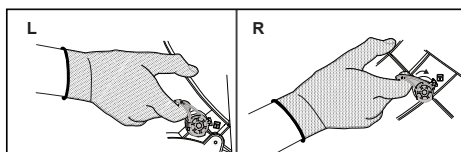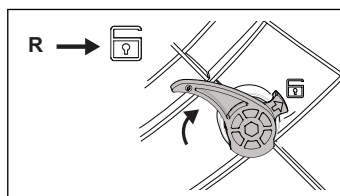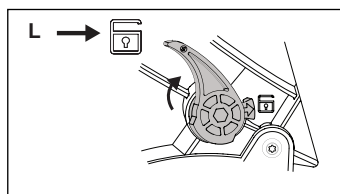








WARNING!

Beware your finger when unlock the drum.

Installation

WARNING!

Before proceeding with installation, read the safety information, and dimension preferred.



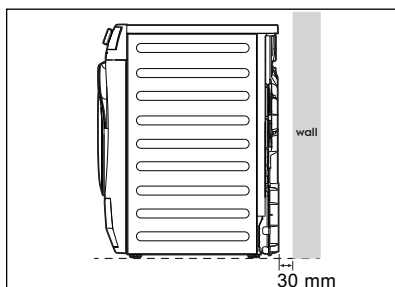
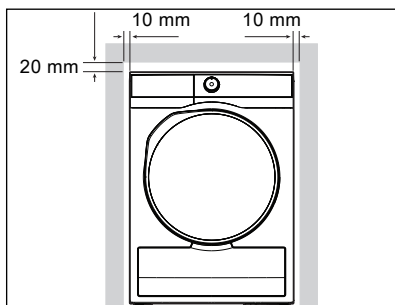
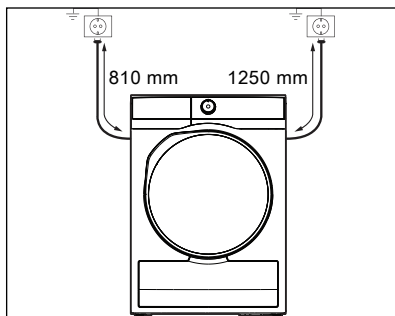
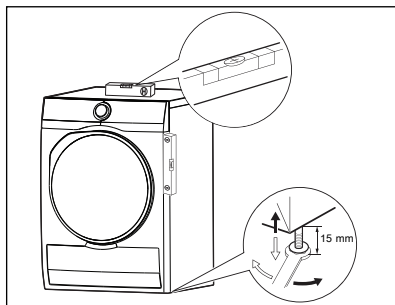
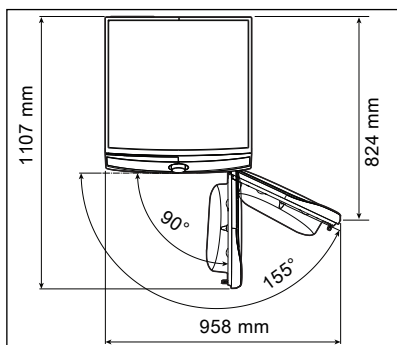
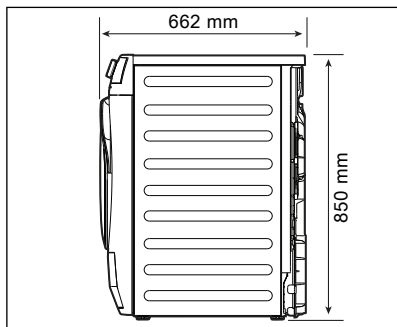
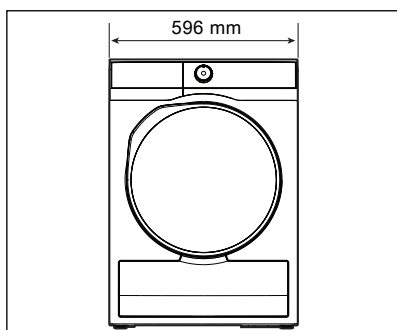















WARNING!





The tumble dryer cannot be placed on top of a washing machine. For more information, please contact authorized dealer.

Door reverse guide

A tumble dryer can possibly change and reverse the door.

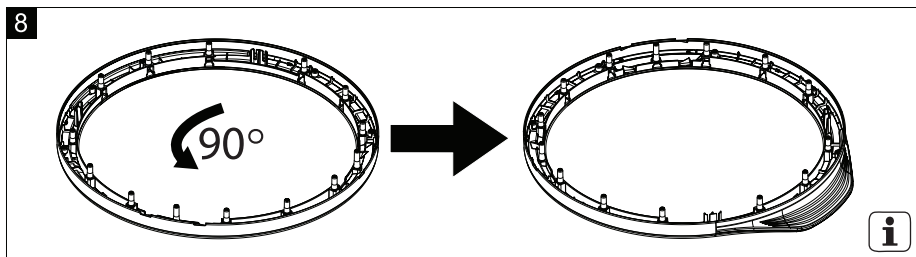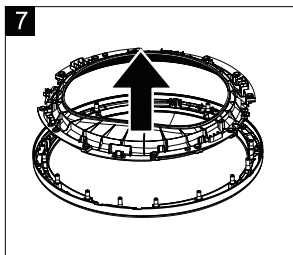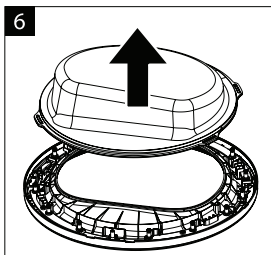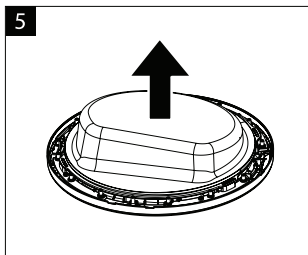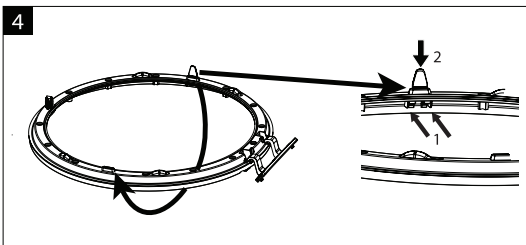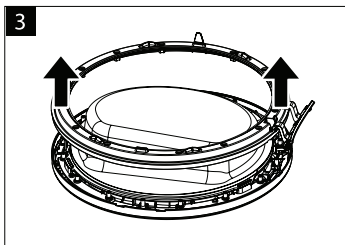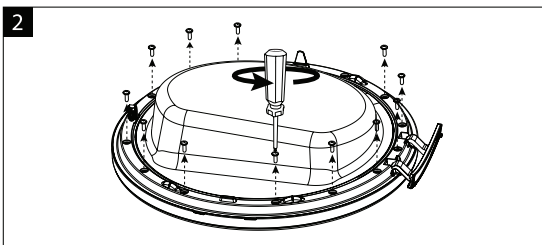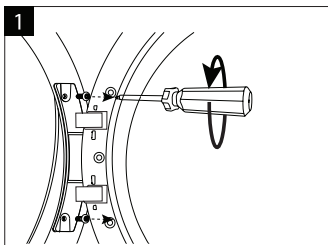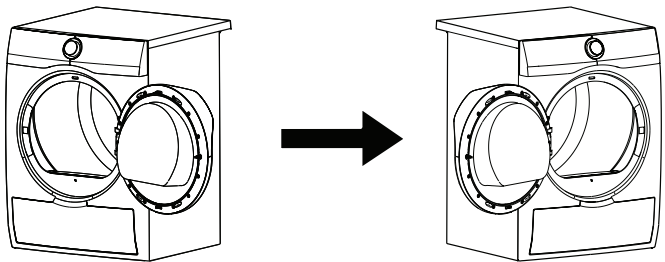


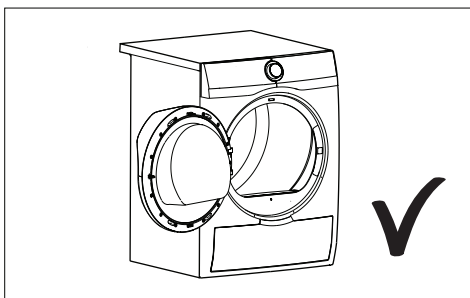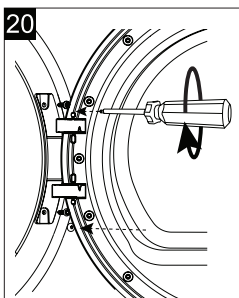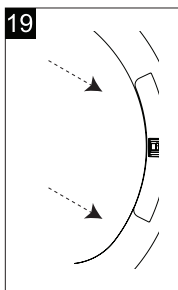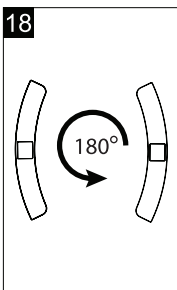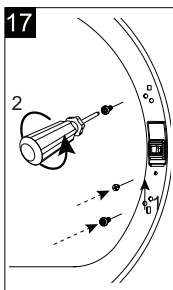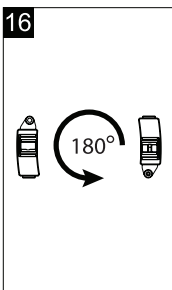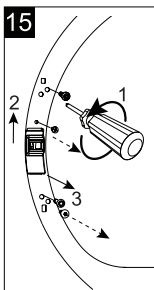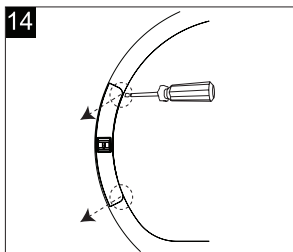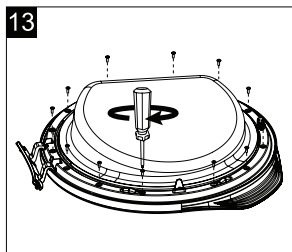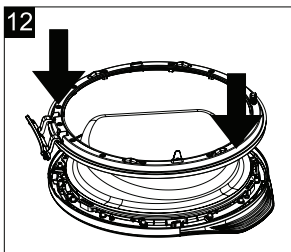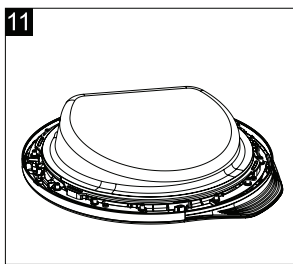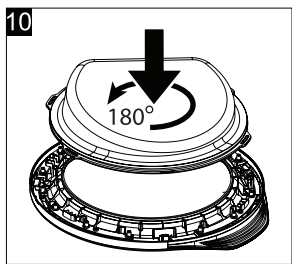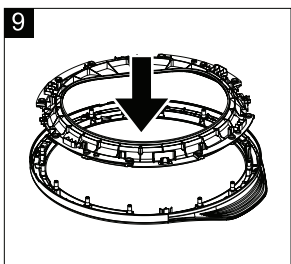

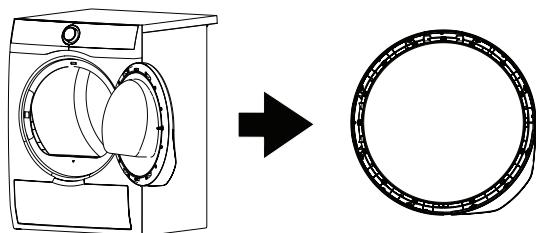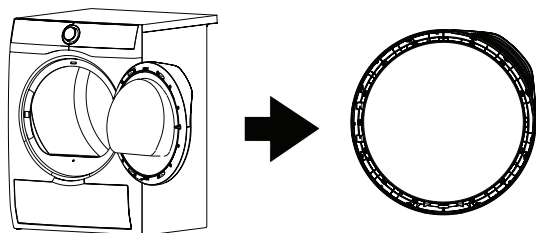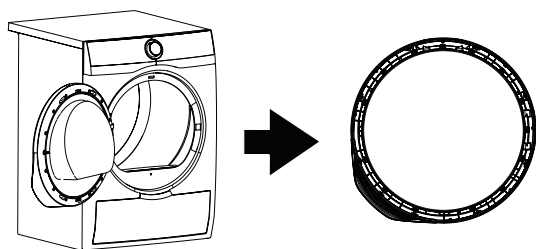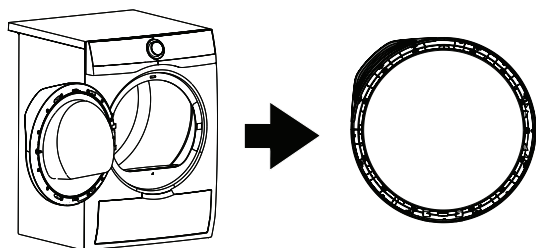

5. CONTROL PANEL

5.1 Control Panel Description

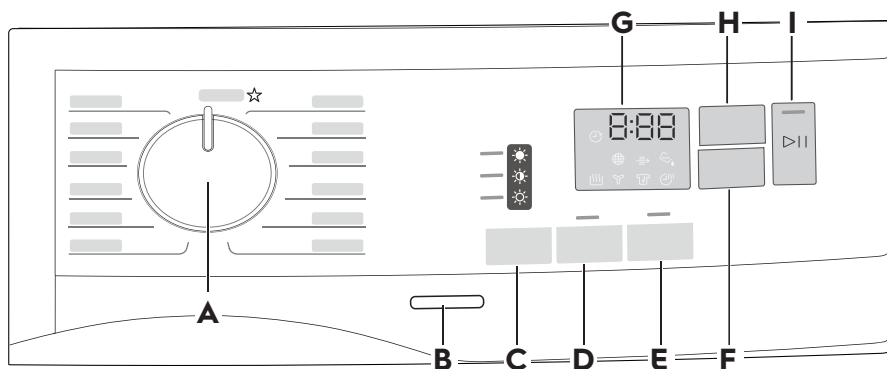

A Programme knob

B On/Off button

C Dryness Level touch button

- Extra Dry
- Cupboard Dry
- Iron Dry

D Reverse Plus touch button

- (Favourite Option)

E Extra Anticrease touch button

- (Lock Option)

F Delay Start touch button


G Display

H Time Dry touch button

I Start/Pause touch button

i Press the touch buttons with your finger in the area with the symbol or name of the option. Do not wear gloves when you operate the control panel. Make sure that the control panel is always clean and dry.

5.2 Display

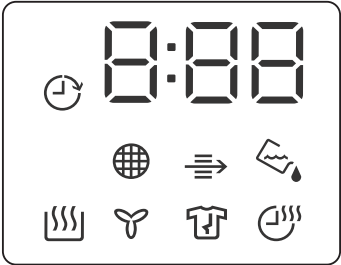

	Time Dry icon		Indicator : Cooling phase
	Delay Start icon		Indicator : Anticrease phase
	Indicator : Check heat exchanger		Wrong Selection
	Indicator : Clean filter		Program Duration
	Indicator : Drain the water container		Time Drying Duration
	Indicator : Drying phase		Delay Start Duration

 The icon, function or phase names that appeared in this manual may differ from your product.

6. PROGRAMMES

6.1 Programme Chart

Programme	Load ¹⁾	Properties / Fabric type
Eco ³⁾	Max	Cotton fabrics programme designed for maximum energy saving.
Cottons	Max	White and colored cotton fabrics program. The default setting is for ready-to-store dryness level.
Delicates	2 kg	Recommended for generic delicate fabrics such as viscose, rayon, acrylic and their blends.
Wool	1 kg	Gently dries machine and hand-washable woollens. Tumbling is minimized as the fast drum speed motion makes the garment lie flat on the inside of the drum walls replicating flat drying. Approved by Woolmark.
Denim	4 kg	Deeply dries jeans and other denim garments, even in thick parts like pockets, seams, and cuffs reducing entanglement.
Easy Iron	2 kg	Limits creases on small loads of cotton, synthetic and mixed fabric garments for easy ironing. Features two drying levels: Iron leaves garments slightly damp for ironing or hanging; Cupboard fully dries items.
Refresh	1 kg	Short low temperature cycle that helps in removing odours from a small amount of garments. Indicated also for dry clothes that were in storage for long time.
Sportswear	4 kg	Dries generic sportswear made with synthetic fibres including polyester, elastane blends, and polyamide.
Bedlinen XL	4.5 kg	Up to three bed linen sets, one of which can be double size.
Duvet	3 kg	Ensures proper drying of inner parts through single or double duvets, pillows, and padded blankets.
Synthetics	4 kg	Blended garments containing mostly synthetic fibres like polyester, polyamide, etc.
MixDry	5 kg	Designed for routine drying of what you wash without sorting. Dries evenly clothes made of cotton, cotton-synthetic blends and synthetic.
Favourite ☆	Depends on a memorized programme.	

1) Maximum capacity depends on model of dryer.

2) Tested for Candida albicans, MS2 Bacteriophage and Escherichia coli in external test performed by Swisstat Testmaterialien AG in 2021 (Test Report No. 20212038).

3) This is the reference programme used to assess the compliance according to UK Ecodesign for Energy-Related Products and Energy Information Regulations. This programme is able to dry cotton laundry from an initial moisture content of the load of 60 % down to a target final moisture content of the load of 0 %.

6.2 Programme Options Compatibility

Programme ¹⁾	Dryness Level			Reverse Plus	Extra Anticrease	Time Dry	Delay Start
							
Eco		■			■		■
Cottons	■	■	■	■	■	■	■
Delicates		■			■		■
Wool						■ ²⁾	■
Denim	■	■		■	■		■
Easy Iron		■	■		■		■
Refresh					■		■
Sportswear		■			■		■
Bedlinen XL		■			■	■	■
Duvet		■			■		■
Synthetics	■	■	■	■	■	■	■
MixDry	■	■			■	■	■
Favourite ☆	Depends on a memorized programme.						

1) Together with the programme you can set 1 or more options. To activate or deactivate them, press the related touch button.

2) See chapter OPTIONS: Time Drying on Wool programme

7. OPTIONS AND SETTINGS

7.1 Options

Dryness Level

This function helps to increase dryness of the laundry. There are 3 options:

-  Extra Dry
-  Cupboard Dry
-  Iron Dry

Reverse Plus

Increase drum reversing frequency to reduce items twisting and entanglement. To increase uniformity of drying result and help reduce creases. Recommended for large or long items (e.g. sheets, trousers, long dresses)

Extra Anticrease

Extends the anticrease phase by 60 minutes at the end of the drying cycle. This function reduces creases. The laundry can be removed during the anticrease phase.

Time Dry

You can set the programme duration, from a minimum of 10 minutes to a maximum of 2 hours.

The required duration is related to the quantity of laundry in the appliance.

 We recommend that you set a short duration for small quantities of laundry or for only one item.

TIME DRYING RECOMMENDATION

10 mins.	action of cool air only (no heater).
20 - 40 mins.	additional drying to improve dryness after previous drying cycle.
>40 mins.	full drying of the small laundry loads up to 4 kg, well spun (>1200 rpm).

Time Dry on Wool programme

Option suitable for Wool programme to adjust final dryness level.

On/Off button

Press and hold briefly this button for a few seconds to activate or deactivate the appliance. A dedicated jingle sound while switching the appliance on or off, lights and display switches on.

Start/Pause

Press the ">|| Start/Pause" touch key to start, pause the appliance or interrupt a running programme.

Delay Start

Before you start the programme, this option makes it possible to define the end of the drying programme from minimum of 30 minutes to maximum of 20 hours.

7.2 Settings

Child lock function

This function prevents children playing with the appliance while a programme is operating. The touch buttons are locked.

Only the "on/off" button is unlocked.

Activating the child lock function:

1. Press the "on/off" button to activate the appliance
2. Press and hold "Extra Anticrease" touch button for a few seconds, the icon "" will flash on the display.

 To deactivate function Press and hold the same touch key few seconds, The Child lock icon "" show in the display. This function remains enabled even after the appliance is switched off.

Favourite

You can do your configuration of programme and options and memorize in the appliance memory.

To memorize your configuration:

1. Press the "on/off" button to activate the appliance
2. Set the program and available options.
3. Press the "Reverse Plus" button for some seconds.

The sound and the message on the display confirm that the configuration is memorized.

To activate your memorized configuration:

1. Press the "on/off" button to activate the appliance.
2. Use the programme knob to set "Favourite  position.
3. Previously memorized configuration of programme and options will be restore.

Water container indicator

By default, the water container indicator is on. It comes on when the programme is completed or when it is necessary to empty the water container.

 If a draining kit is installed (additional accessory), the appliance automatically drains the water from the water container. In this case we recommend that you deactivate the indicator of the water container.

Deactivating the water container indicator:

1. Press the "on/off" button to activate the appliance.
2. Wait approximately 8 seconds.
3. Press and hold touch buttons "Time Dry" and "Delay Start" at the same time.

The display shows one of these 2 configurations:

- The display shows " F F". After 5s the display returns to normal mode.
- The display shows "". After 5s the display returns to normal mode.

Adjustment of remaining laundry moisture

 Every time you enter in the "Adjustment of remaining laundry moisture" mode, previously set degree of remaining moisture will change into next value (e.g. previously set "- 2-" will change into "- 1-").

To change the default degree of remaining moisture:

1. Press the "on/off" button to activate the appliance.
2. Use the programme knob to set any programme.
3. Wait approximately 8 seconds.
4. Press and hold the buttons "Reverse Plus" and "Extra Anticrease" at the same time.

One of these indicators comes on:

-  - The maximum dryness
 -  - The more dry laundry
 -  - The standard dry laundry
5. Press and hold the buttons "Reverse Plus" and "Extra Anticrease" again until the indicator of the correct level comes on.

 If the display returns to the normal mode (the time of the selected programme from step 2. Will be displayed), while setting the degree of remaining moisture, press and hold "Reverse Plus" and "Extra Anticrease" button once again to enter to the "Adjustment of remaining laundry moisture" mode (previously set degree of remaining moisture will change into next value).

6. After 5 s the display returns to normal mode.

Buzzer on/off

This setting permits you to either enable or disable the buzzer at the end of the program. As an example, you might wish to disable this buzzer when you start a wash when going to bed, so that when the drying finished approximately 1 hour later, it will not disturb you through the night.

 Error warning beeps such as critical faults are not disabled.


- To disable the buzzer sound, press and hold "Dryness Level" and "Reverse Plus" touch buttons at the same time for 2 seconds, the icon "b F" will show on display along with buzzer sound.
- To return to default configuration press these 2 touch buttons and hold approximately 2 seconds, the icon "b n" will show on display along with buzzer sound.

8. DAILY USE

8.1 Start a programme without Delay Start

Before you use the appliance to dry items:

1. Prepare the laundry and load the appliance.

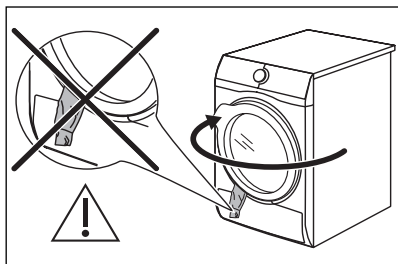

CAUTION!

Make sure that when you close the door, the laundry does not get caught between the appliance door and the rubber seal.

2. Press the "on/off" button to activate the appliance.
3. Set the correct programme and options for the type of load.

The display shows the programme duration.

 Real drying time will depend on type of the load (quantity and composition), the room temperature and the humidity of your laundry after spin drying phase.

4. Press the ">|| Start/Pause" button. The programme starts.

8.2 Starting the programme with Delay Start

1. Set the correct programme and options for the type of load.
2. Press the "⌚ Delay Start" button again and again until the display shows the delay time you want to set.

 You can delay the start of a program from a minimum of 30 minutes to a maximum of 20 hours.

3. Press the ">|| Start/Pause" button.
4. The display shows the countdown of the delay start. When the countdown is completed, the program starts.

8.3 Change a programme

1. Press the "on/off" button to deactivate appliance
2. Press the "on/off" button to activate the appliance.
3. Set the programme.

8.4 At the end of the programme

When the programme is completed:

- An intermittent acoustic signal operates.
- The display shows "E n d"
- The indicator "🌀" is blink.
- The indicator "🌐" is and "🌀" may come on.
- The ">|| Start/Pause" indicator is on.

The appliance continues to operate with the anticrease phase for approximately 30 minutes or more if Extra Anticrease option was set (see chapter Option-Extra Anticrease).

The anticrease phase reduces creasing.

You can remove the laundry before the anticrease phase is completed. We recommend, for better results, that you remove the laundry when the phase is almost completed.

When the anticrease phase is completed:

- The display shows "E n d"
- The indicator "🌀" is off.
- The indicator "🌐" is and "🌀" remain on.
- The ">|| Start/Pause" indicator goes off.

1. Press the on/off button to deactivate the appliance.
2. Open the appliance door.
3. Remove the laundry.
4. Close the appliance door.

Possible causes of unsatisfactory drying results:

- Inadequate default dryness level settings. See chapter "Dryness level"
- Room temperature is too low or too high. Optimal room temperature is between 18°-25°C.



Always clean the filter and empty the water container when a programme is completed.

8.5 Stand-by function

To reduce energy consumption, this function automatically deactivates the appliance:

- After 5 minutes if you do not start the programme.
- After 5 minutes from the end of the programme.

9. HINTS AND TIPS CARE

9.1 Preparing the laundry



Very often the clothes after washing cycle are kneaded and tangled altogether. Drying kneaded and tangled clothes is inefficient.

To assure proper air flow and even drying it is recommended to shake and load one by one the clothes to the tumble dryer.

To assure proper drying process:

- Close the zips.
- Close the fasteners of duvet covers.
- Do not dry ties or ribbons loose (e.g. apron ribbons). Tie them before you start a programme.
- Remove all items from pockets.
- Turn items with the internal layer made of cotton inside out. Cotton layer must be faced outwards.

- Always set the programme suitable for the type of laundry.
- Do not put light and dark colours together.
- Use suitable programme for cottons, jersey and knitwear to reduce shrinkage.
- Do not exceed the maximum load stated in the programme chapter or shown on the display.
- Dry only the laundry that is suitable for tumble drying. Refer to the fabric label on the items.
- Do not dry large and small items together. Small items can be trapped inside the large items and remain wet.
- Shake the large clothes, fabrics before placing in the tumble dryer. It is to avoid moist places inside the fabric after the drying cycle.

Fabric label	Description
	Laundry is suitable for tumble drying.
	Laundry is suitable for tumble drying at higher temperatures.
	Laundry is suitable for tumble drying at low temperatures only.
	Laundry is not suitable for tumble drying.







10. CARE AND CLEANING

10.1 Cleaning the filter

WARNING!




Avoid the use of water to clean the filter. Instead throw away lint in the dustbin (avoid dispersion of plastic fibre in ambient water).


 To achieve the best drying performances, clean the filter regularly. Clogged filters lead to longer cycles and increase in energy consumption. Use your hand to clean the filter, and if necessary a vacuum cleaner.

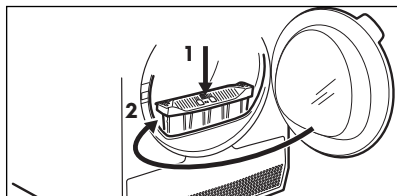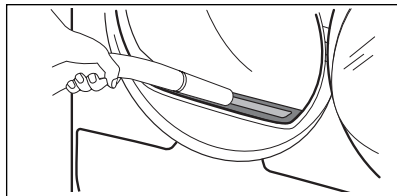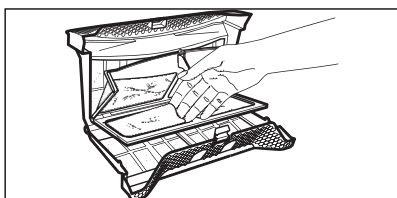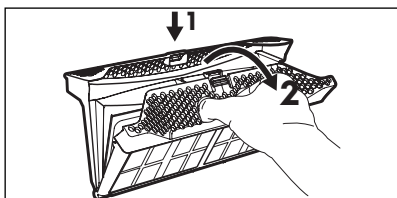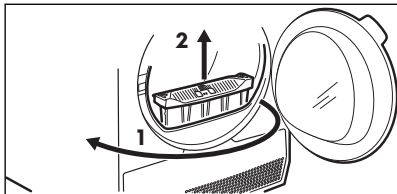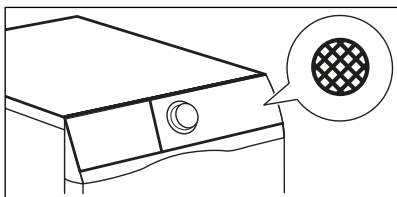

If necessary remove fluff from the filter socket and gasket. You can use a vacuum cleaner.










10.2 Emptying the water container

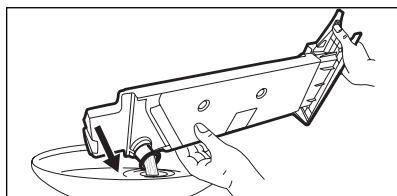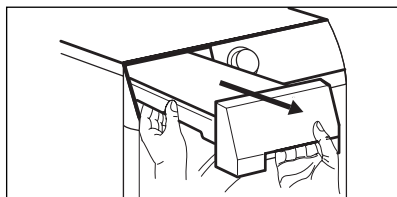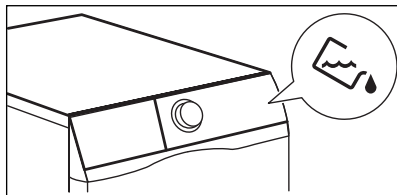

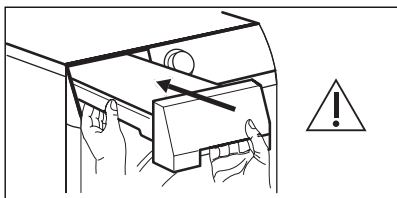

i You can use the water from the water container as an alternative to distilled water (e.g. for steam ironing). Before you use the water, remove dirt residues with a filter.

10.3 Cleaning the Heat Exchange

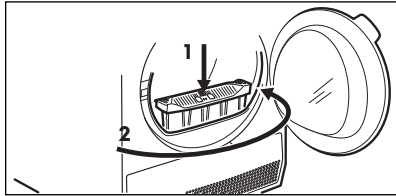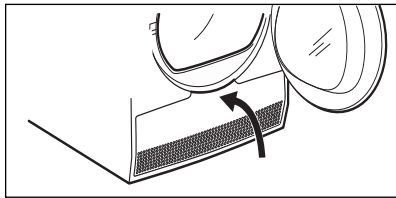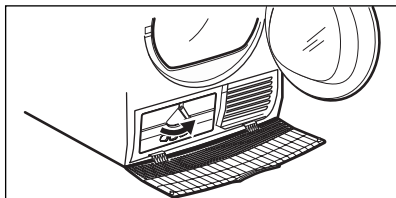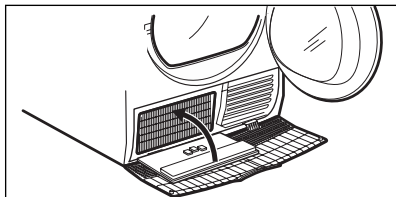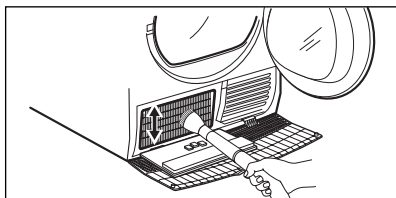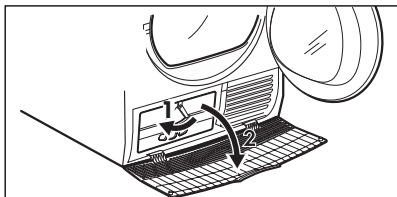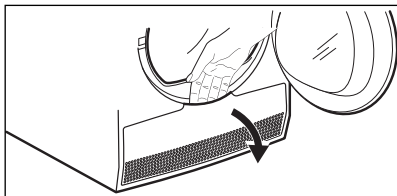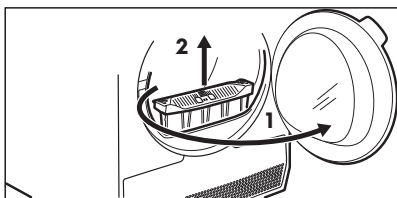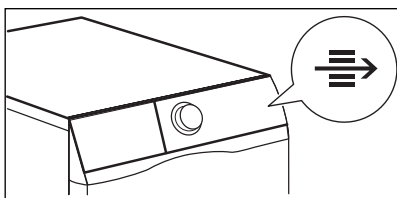

CAUTION!

Do not touch the metal surface with bare hands. Risk of injury. Wear protective gloves. Clean carefully to avoid damaging the metal surface.

10.4 Cleaning the drum



WARNING!

Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum lifters. Dry the cleaned surfaces with a soft cloth.



CAUTION!

Do not use abrasive materials or steel wool to clean the drum.

10.5 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.



CAUTION!

Do not use furniture cleaning agents or cleaning agents which can cause corrosion.

10.6 Cleaning the airflow slots

Use a vacuum cleaner to remove fluff from the airflow slots.

11. TROUBLESHOOTING



WARNING!

Deactivate the appliance before you do the checks.

Malfunction	Alarm Code	Possible cause	Solution
Machine does not start *Connected models	E91	Internal fail. No communication between electronic elements of the appliance.	The programme was not finished properly or the appliance stopped too early. Switch the appliance off and on again. If the error code appears again, contact the Authorised Service Centre.
Machine does not start	EH0	The mains supply is unstable.	When the appliance is showing EH0, please wait until main supply is stable than press start. If the appliance pauses the cycle without any indication then press the cycle start. If the warning will occur check the power cord / socket integrity or main supply.

Problem	Possible solution
You cannot activate the appliance.	Make sure that the mains plug is connected to the mains socket. Check fuse in fuse box (domestic installation).
The drum does not rotate.	Release the rear drum locks manually (see chapter "INSTALLATION").
The programme does not start.	Press "> Start/Pause".
	Make sure that the appliance door is closed.
The appliance door does not close.	Make sure that the installation of the filter is correct.
	Make sure that the laundry is not caught between the appliance door and the rubber seal.
The appliance stops during operation.	Make sure that the water container is empty. Press "> Start/Pause" to start the programme again.
	Load is too small, increase the load or use the "🌀 Time Dry" programme.
The cycle time is too long or unsatisfactory drying result. ¹⁾	Make sure that the weight of the laundry is suitable for the duration of the programme.
	Make sure that the filter is clean.
	The laundry is too wet. Spin the laundry in the washing machine again.

Problem	Possible solution
	Ensure that the room temperature is higher than +5°C and lower than +35°C. Optimal room temperature is 18°C to 25°C.
	Set the "☺ Time Dry" or the "☀ Extra Dry" programme. ²⁾
The display shows – – –	If you want to set a new programme, deactivate and activate the appliance.
	Make sure that the options are suitable for the programme.

1) After maximum 5 hours, the programme ends automatically.

2) It can happen that some area remains humid when drying big items (e.g. bed sheets).

If the drying results are not satisfactory

- The set programme was incorrect.
- The filter is clogged.
- The Heat Exchanger is clogged.
- There was too much laundry in the appliance.
- The drum is dirty.
- Incorrect setting of the conductivity sensor (See chapter "Adjustment of remaining laundry moisture" for better setting).
- The airflow slots are clogged.
- Room temperature is too low or too high (optimal room temperature 18°C to 25°C)

12. TECHNICAL DATA

Model Name	T0718AEU4B
Height x Width x Depth	850 x 596 x 662 mm
Max. depth with the appliance door open	1107 mm
Max. width with the appliance door open	958 mm
Adjustable height	850 mm (+ 15 mm - feet adjustment)
Drum volume	113 l
Maximum load	8 kg
Voltage	230-240V
Frequency	50Hz
Acoustic airborne noise emission for the drying cycle of Eco programme at maximum load	67 dB(A)
Total power	800 W
Type of use	Household
Permitted ambient temperature	+ 5°C to + 35°C
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture	IPX4
Gas designation	R290
Gas weight	0,140 kg

13. CONSUMPTION VALUES

13.1 Introduction

i The QR code on the energy label supplied with the appliance provides a web link to the information related to the performance of the appliance. Keep the energy label for reference together with the user manual and all other documents provided with this appliance.

13.2 Legend

kg	Laundry load.	rpm	Spun at
kWh	Energy consumption.		
hh:mm	Programme duration.		
%	Initial moisture at the end of spinning phase and target final moisture at the end of drying programme. The higher is the spin, the higher is the noise at spin, but lower is the initial moisture and energy consumption when drying the laundry.		

13.3 According to Uk Ecodesign for Energy-Related Products and Energy Information Regulations

i Following values are obtained in laboratory conditions according with relevant standards. Different parameters can change the data, for example: the quantity of laundry, the type of laundry and the ambient conditions. The initial moisture content of the laundry, the water type, the supply voltage and if you change the default setting of a programme may also affect the energy use, the duration of the drying programme and final humidity.

Programme	Load (kg)	Spun at (rpm)	Initial moisture (%)	Drying time (h:mm)	Energy consumption (kWh)	Target final Moisture (%)
ECO ¹⁾	8,0	1000	60	2:43	1,85	0,0
ECO ¹⁾	4,0	1000	60	1:36	1,04	0,0

1) This is the reference programme used to assess the compliance with according to UK Ecodesign for Energy-Related Products and Energy Information Regulations. This programme is able to dry cotton laundry from an initial moisture content of the load of 60 % down to a target final moisture content of the load of 0 %.

Power consumption in different modes

Off mode power consumption (W)	Standby mode power consumption (W)	Delay Start (W)
0,50	0,50	4,00

Time to Off/Standby mode is 15 minutes maximum.

13.4 Common programmes

 These values are indicative only.

Programme	Load (kg)	Spun at (rpm)	Initial moisture (%)	Drying time (h:mm)	Energy consumption (kWh)	Target final Moisture (%)
Eco	8,0	1000	60	2:43	1,85	0,0
	4,0	1000	60	1:36	1,04	0,0
Cottons Iron	8,0	1000	60	2:25	1,40	12,0
	4,0	1000	60	1:30	0,90	12,0
Cottons Extra	8,0	1000	60	3:40	2,40	-3,0
	4,0	1000	60	2:35	1,60	-3,0
Synthetics Cupboard	4,0	1200	40	1:10	0,68	1,0
Synthetics Iron	4,0	1200	40	0:50	0,48	12,0
Synthetics Extra	4,0	1200	40	1:20	0,74	0,0
Wool	1,0	1200	35	1:00	0,55	5,0
Delicates	2,0	1200	35	1:23	0,80	0,5

14. ENVIRONMENT CONCERNS

14.1 Packaging Materials

 The materials marked with the symbol  are recyclable.

>PE=<polyethylene

>PS=<polystyrene

>PP=<polypropylene.

This means that they can be recycled by disposing them properly in appropriate collection containers.

14.2 Old Machine

Use authorized disposal sites for your old appliance. Help to keep your country tidy!

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste.

Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

